

=====  
Version 0.97 2018-05-16  
=====

- \* Improved Art-Net and sACN network traffic filtering.
- \* Optimized RDM table of device memory organization.
- \* DMX outputs are now turned off if low supply voltage is detected.
- \* Improved displaying of fatal errors.

=====  
Version 0.96 2017-11-20  
=====

- \* All RDM UUIDs and MAC addresses are now listed in the device info screen.
- \* Improved display of network address information.

=====  
Version 0.95 2017-11-07  
=====

- \* User Input Password Locking  
Users may choose to password protect their XND-4. Once password protection is enabled, the device will automatically lock itself on restart or when the screensaver becomes active. Users may also manually lock the user input on their device via the menu.
- \* Independent Universes  
Users may enable the assignment of independent universe addresses per port. In this case, the node does no longer use the Net and Subnet address as defined by the Art-Net standard, but each port has its own 15bit address, which is also displayed on the home screen.
- \* The following factory presets may be recalled from the menu:
  - \* "Art-Net"
  - \* "Art-Net, no RDM"
  - \* "1,2: Art-Net - 3,4: sACN"
  - \* "Art-Net, Office Network"
- \* A selected output automatically becomes unselected when no user interaction has occurred for 20 seconds.
- \* The maximum number of RDM devices per output port is set to 250.

=====  
Version 0.94 2017-09-11  
=====

- \* RDM support for Art-Net universes.

=====  
Version 0.93 (Beta Release) 2017-07-11  
=====

- \* Added RDM support (experimental).

=====  
Version 0.92 2017-06-06  
=====

- \* Added support for sACN draft v0.2.
- \* Fixed issue with non-zero start code sACN data packets.

=====  
Version 0.91 (Beta Release) 2017-03-27  
=====

- \* Added support for sACN.

=====  
Version 0.90 2016-06-28  
=====

- \* First release.